


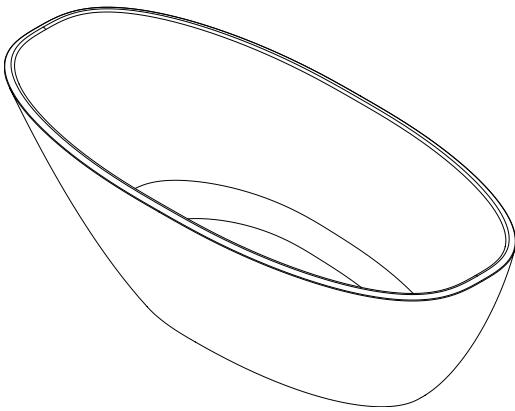
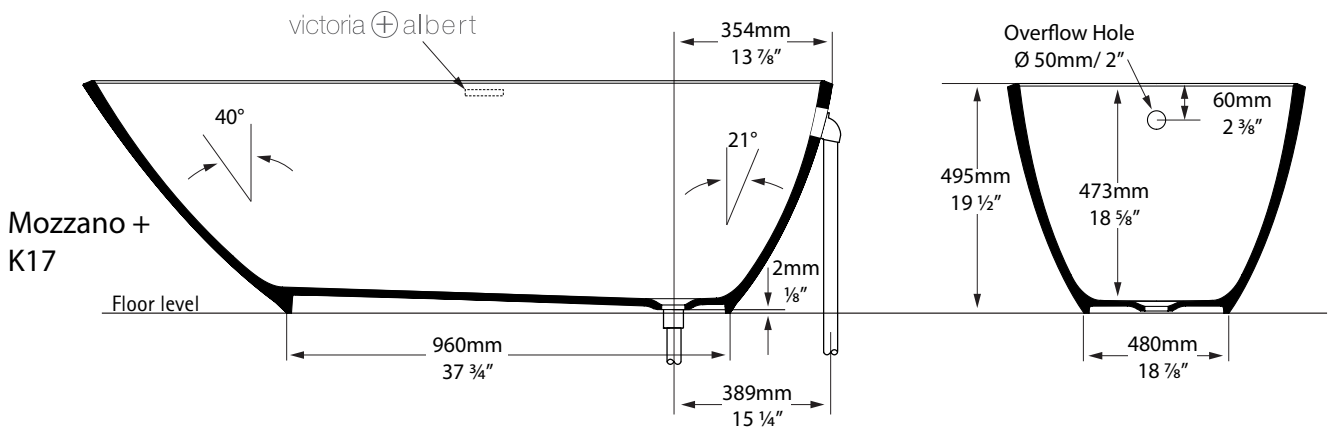
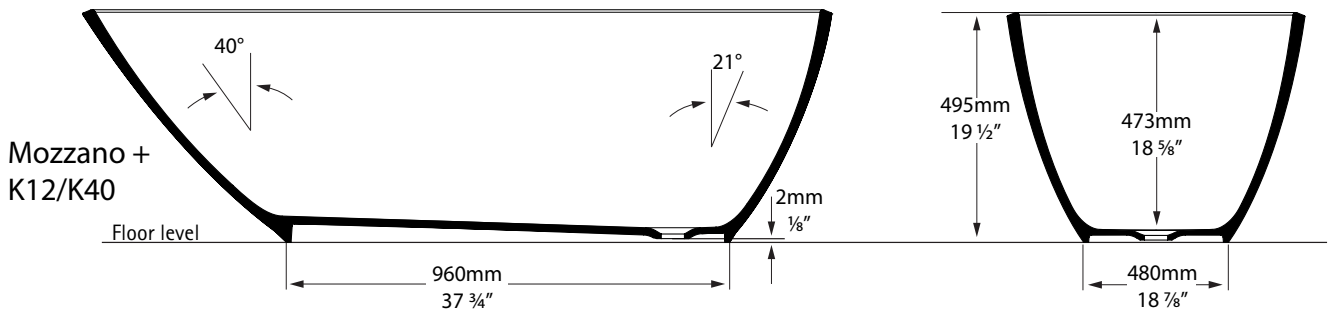



Mozzano UK-EU

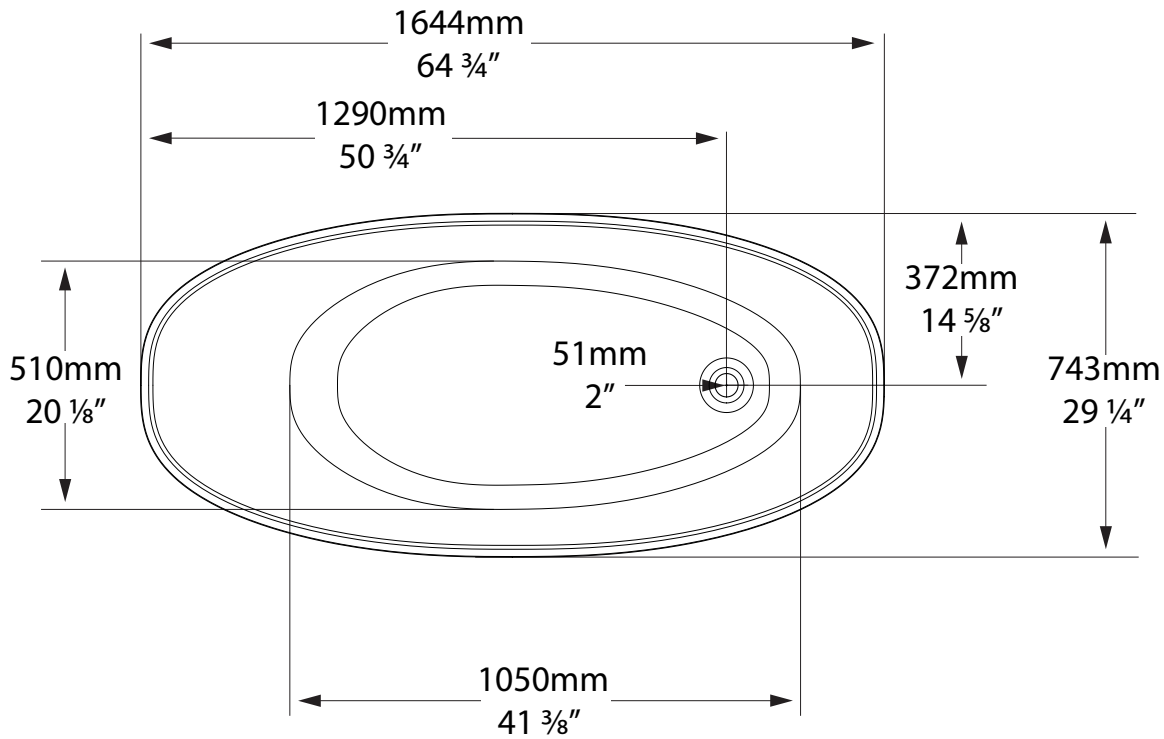



Fitting instructions
Notice d'installation
Instrucciones de montaje
Montageanleitung
Istruzioni di montaggio
Montagehandleiding
Указания по креплению

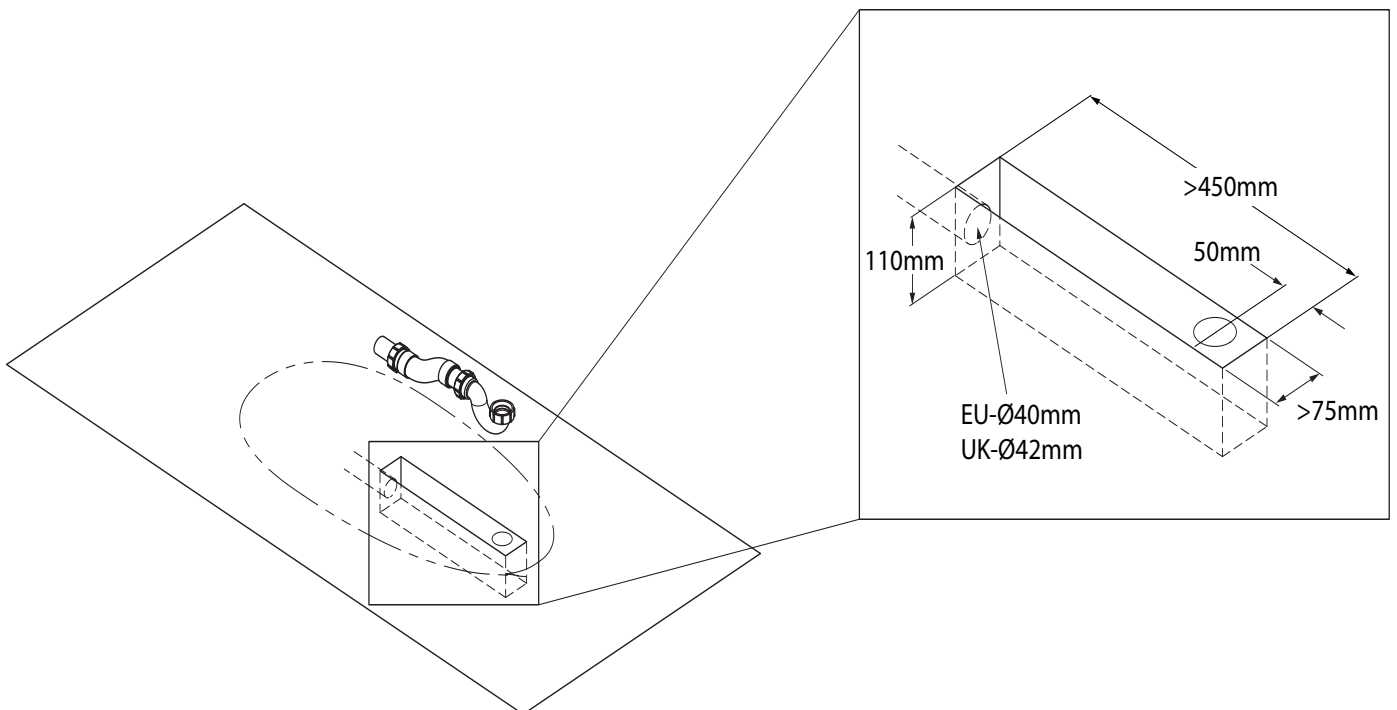


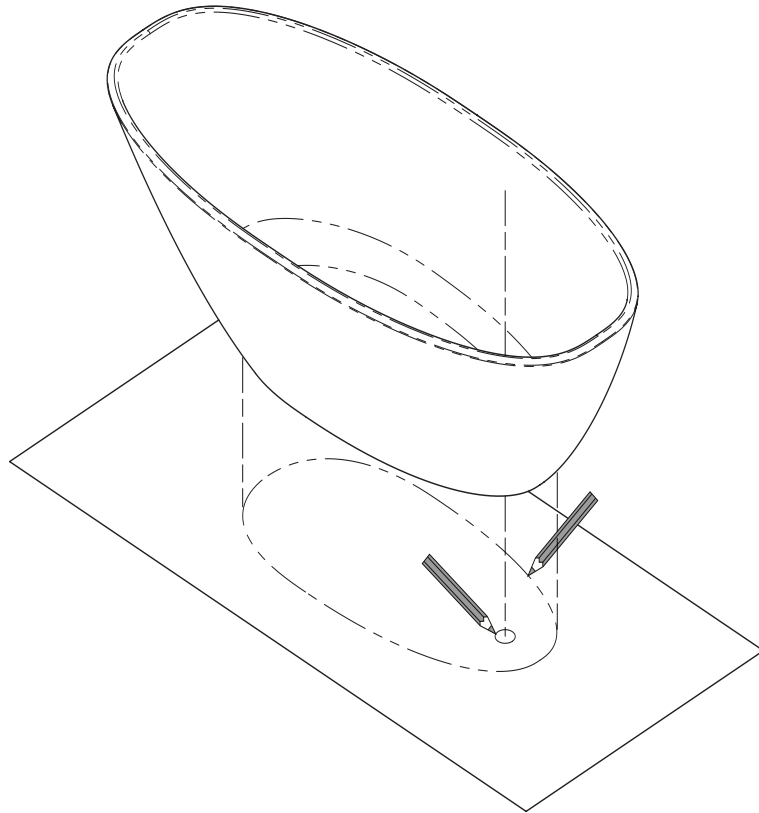


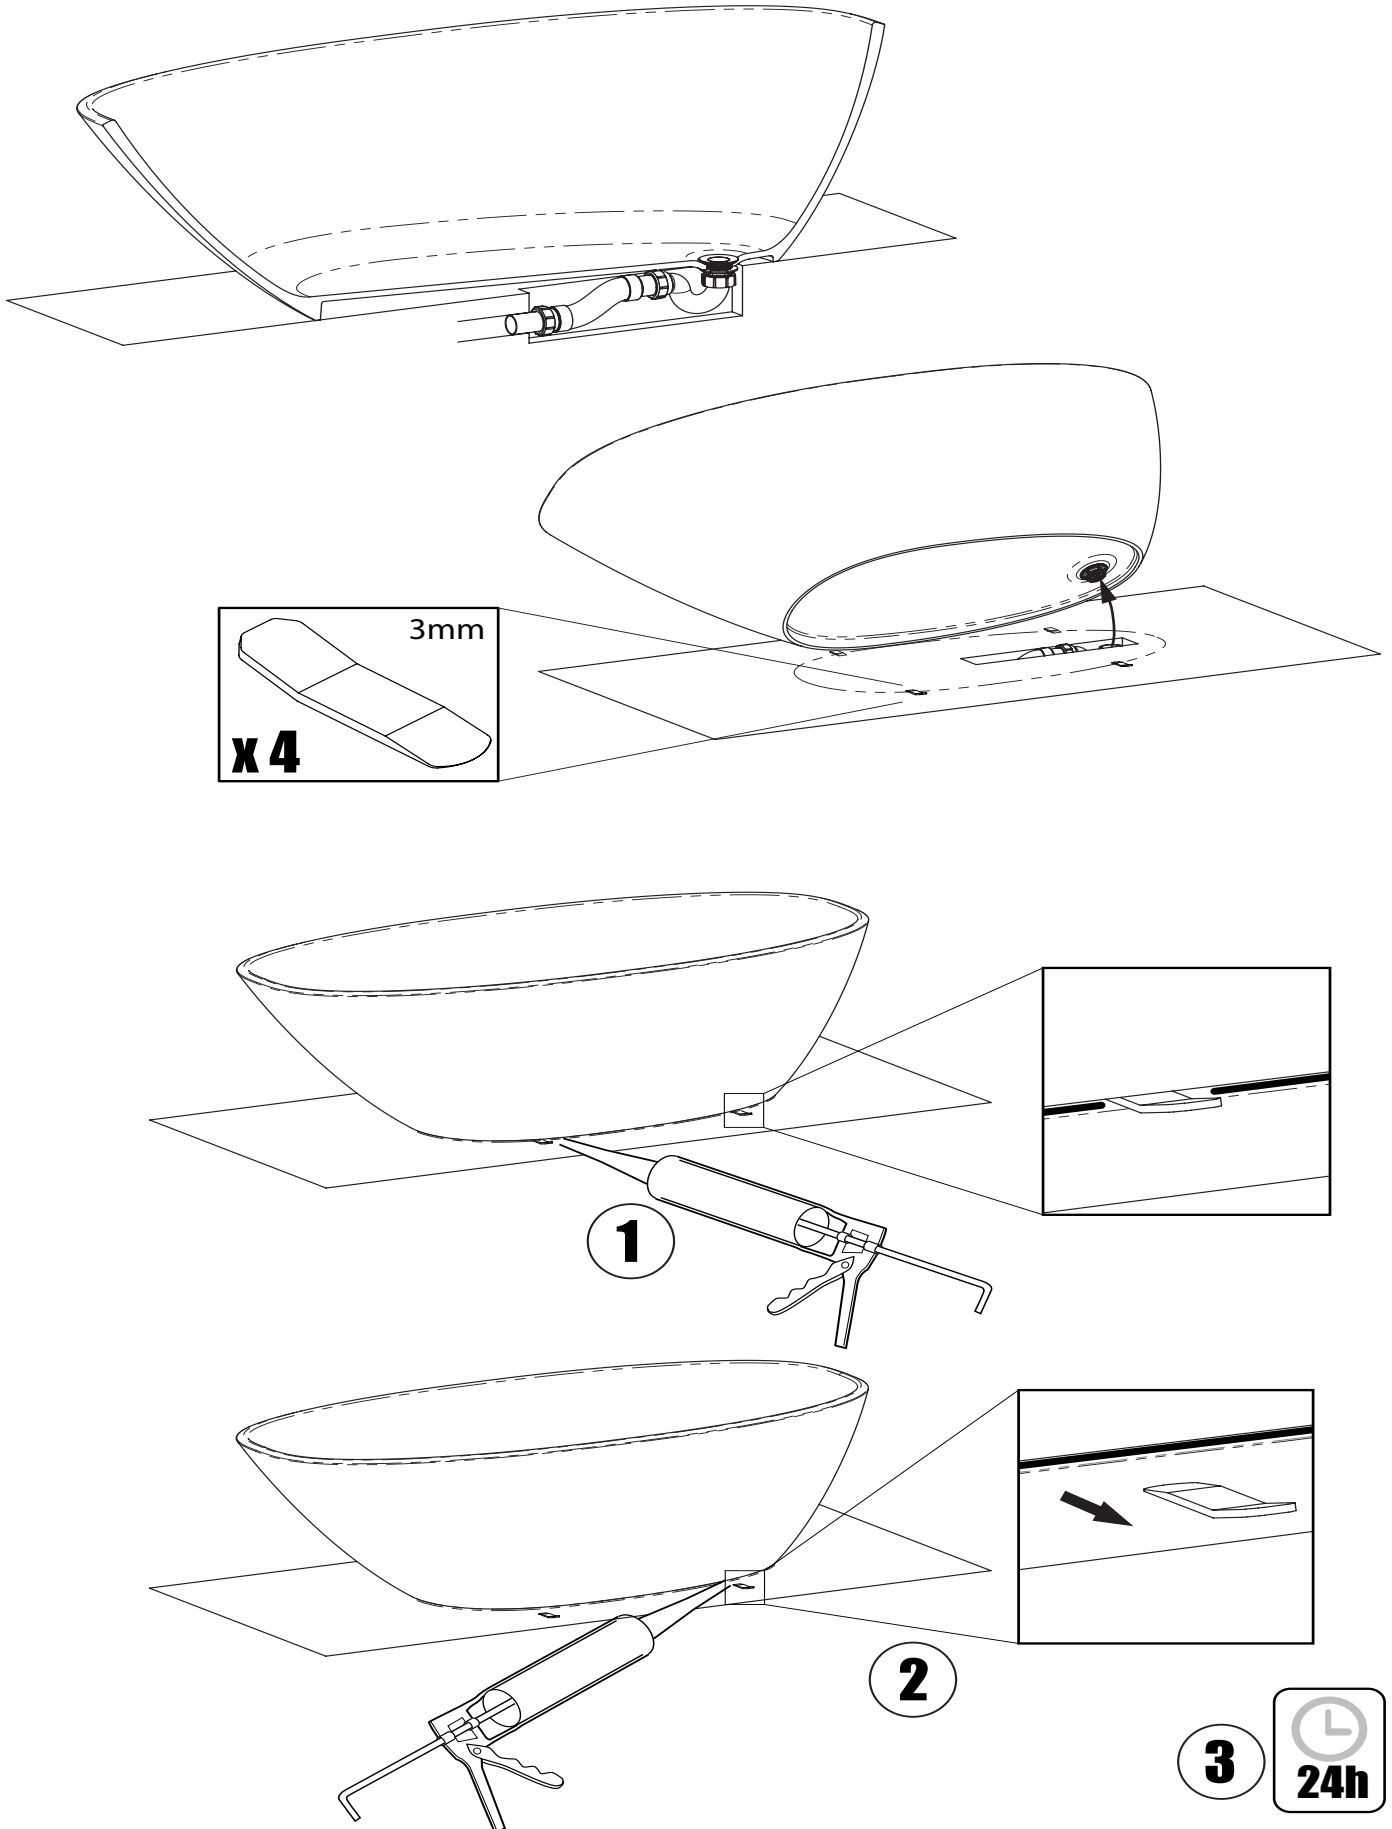


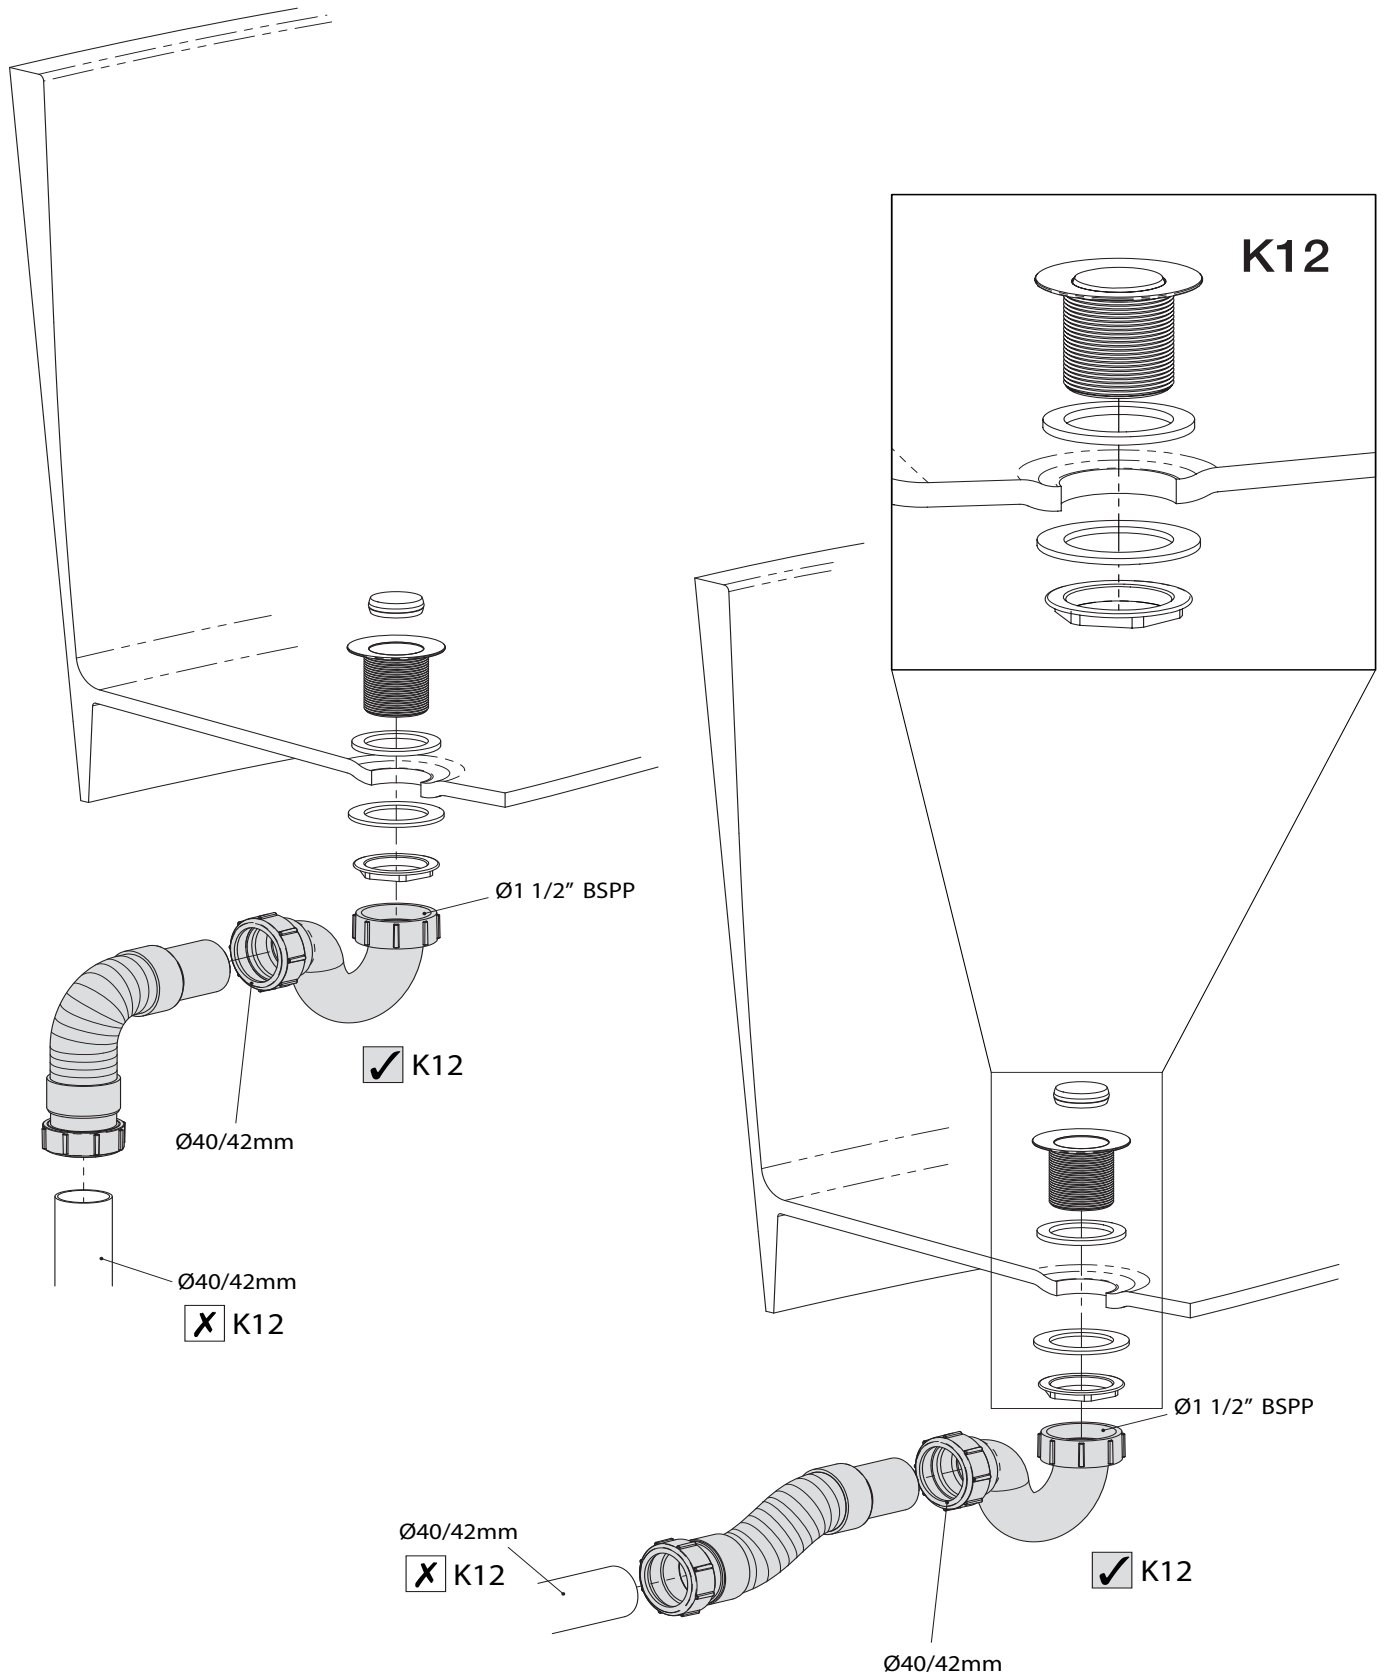


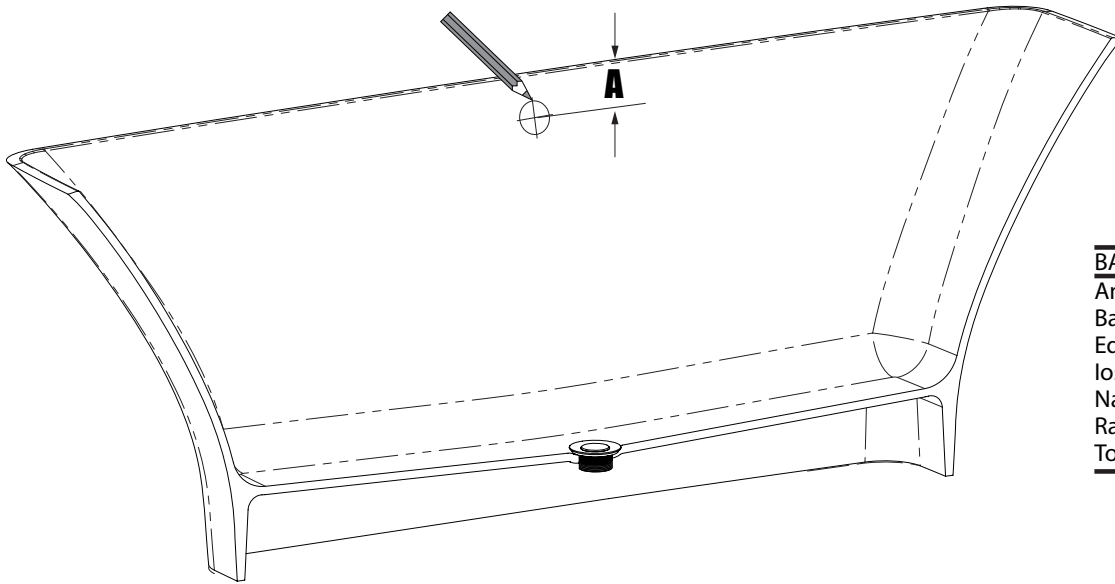


BATH	A (MIN)
Amalfi	135mm
Barcelona	50mm
Edge	50mm
los	50mm
Napoli	50mm
Ravello	65mm
Toulouse	80mm

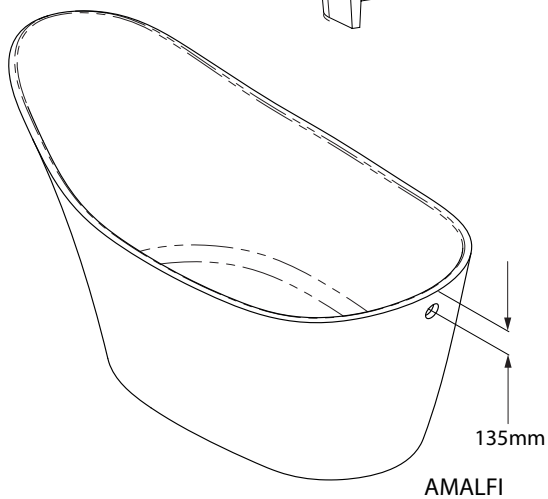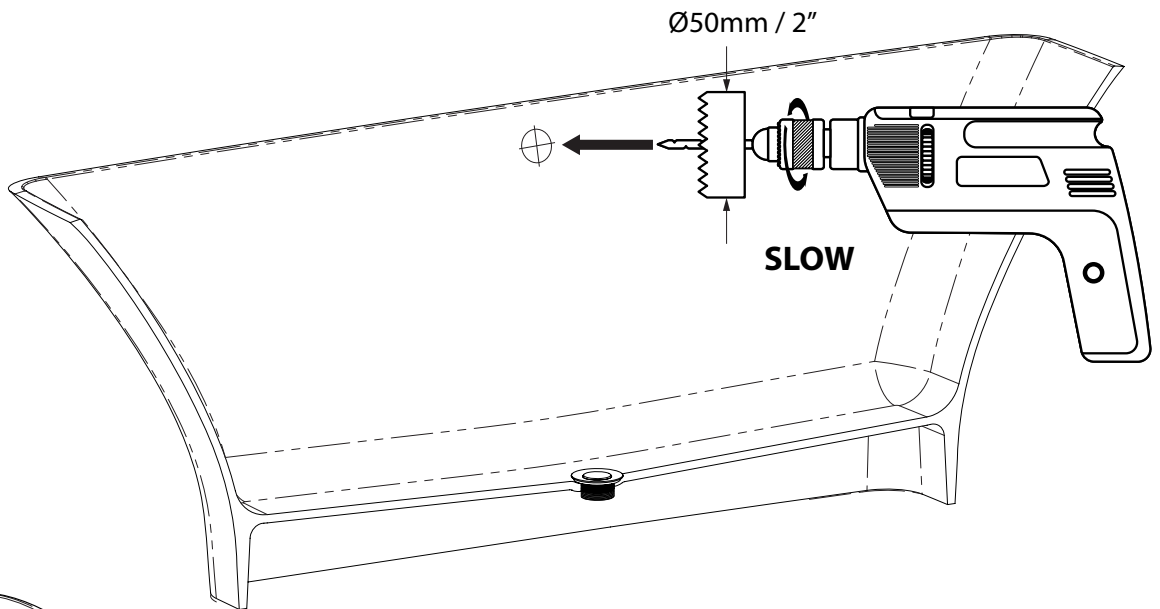

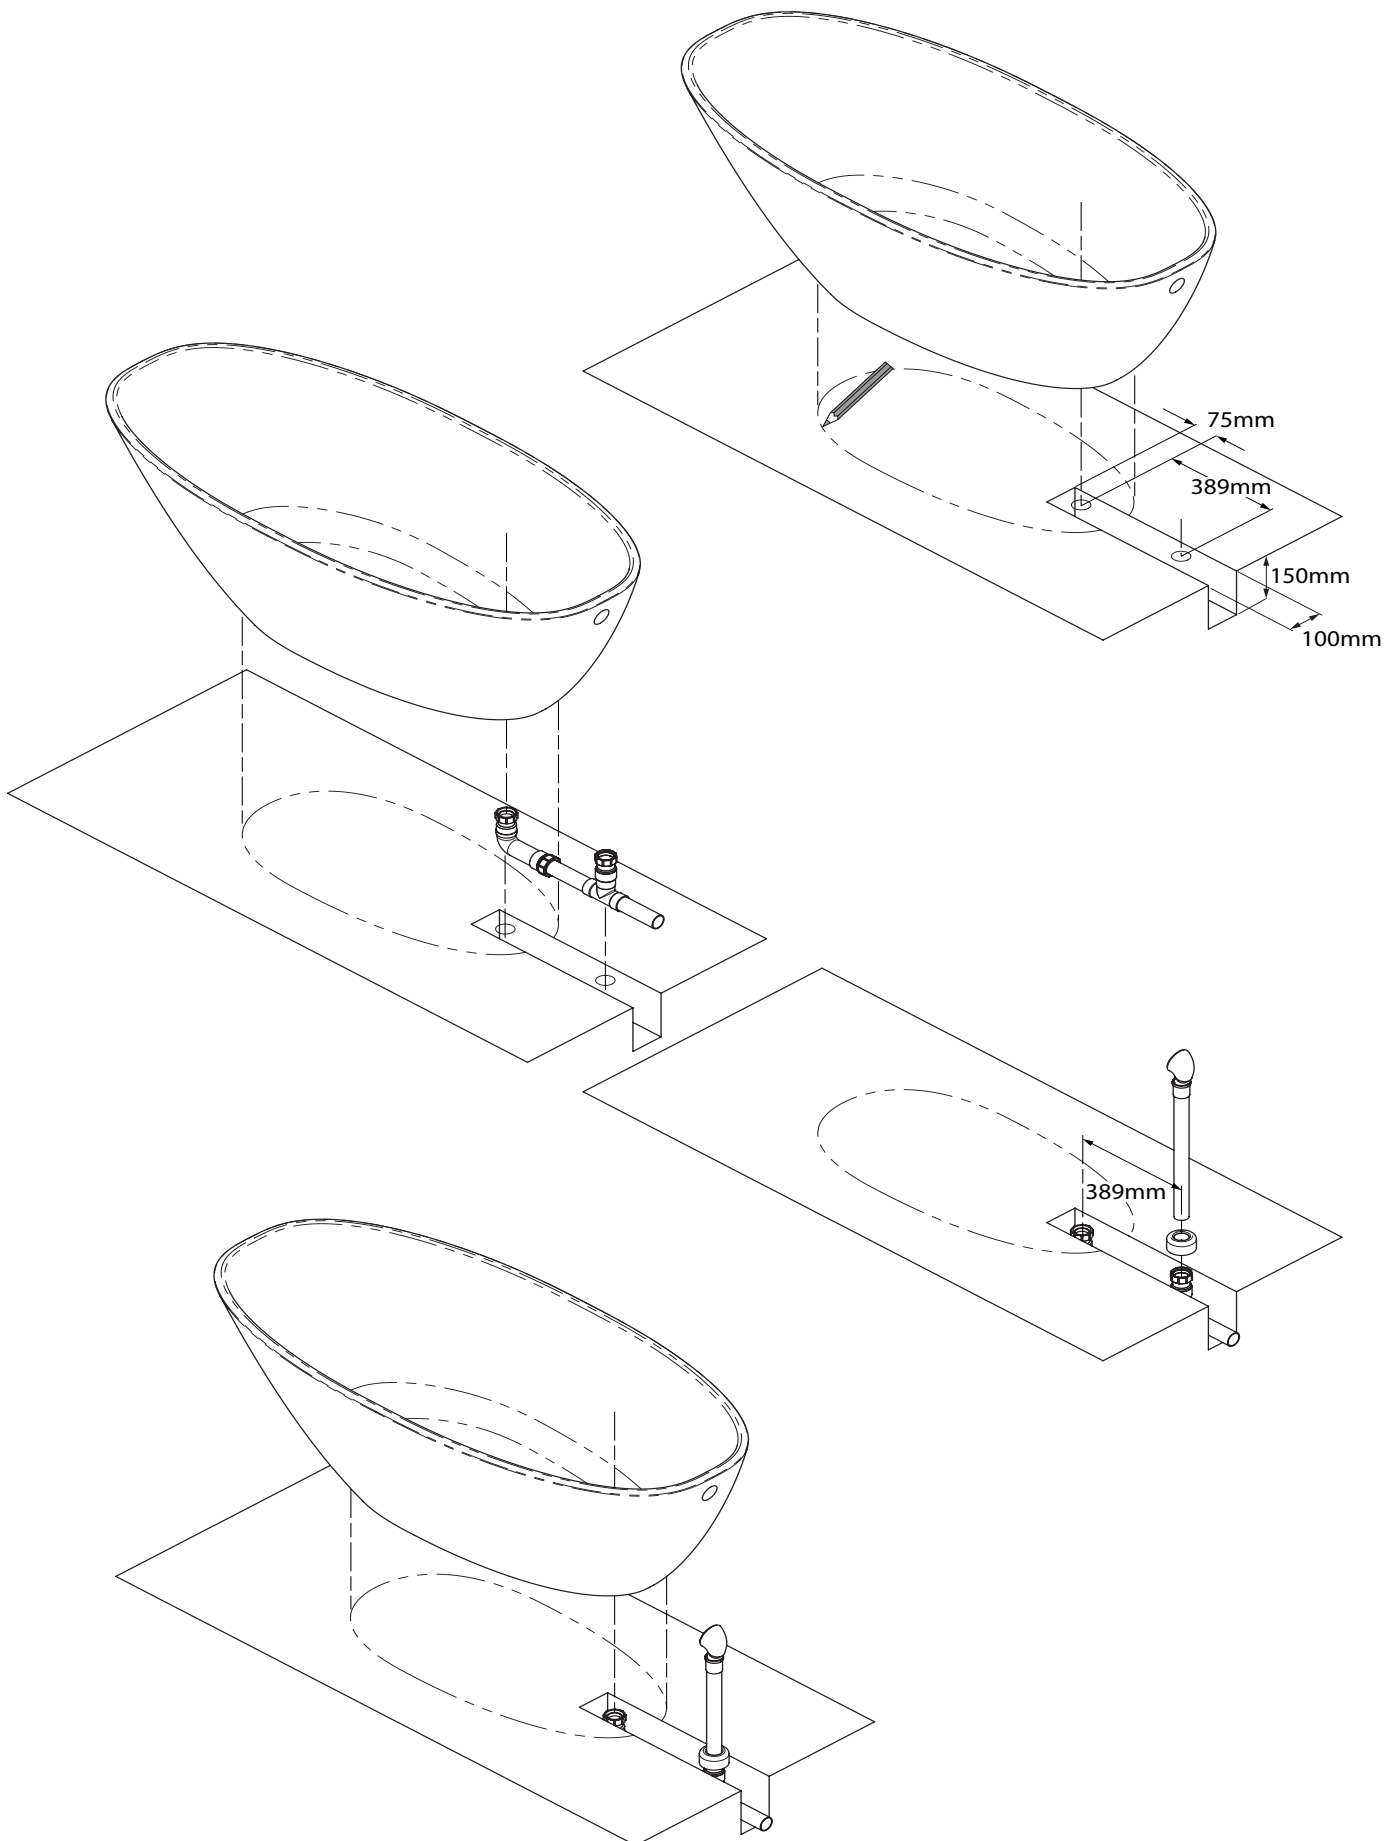


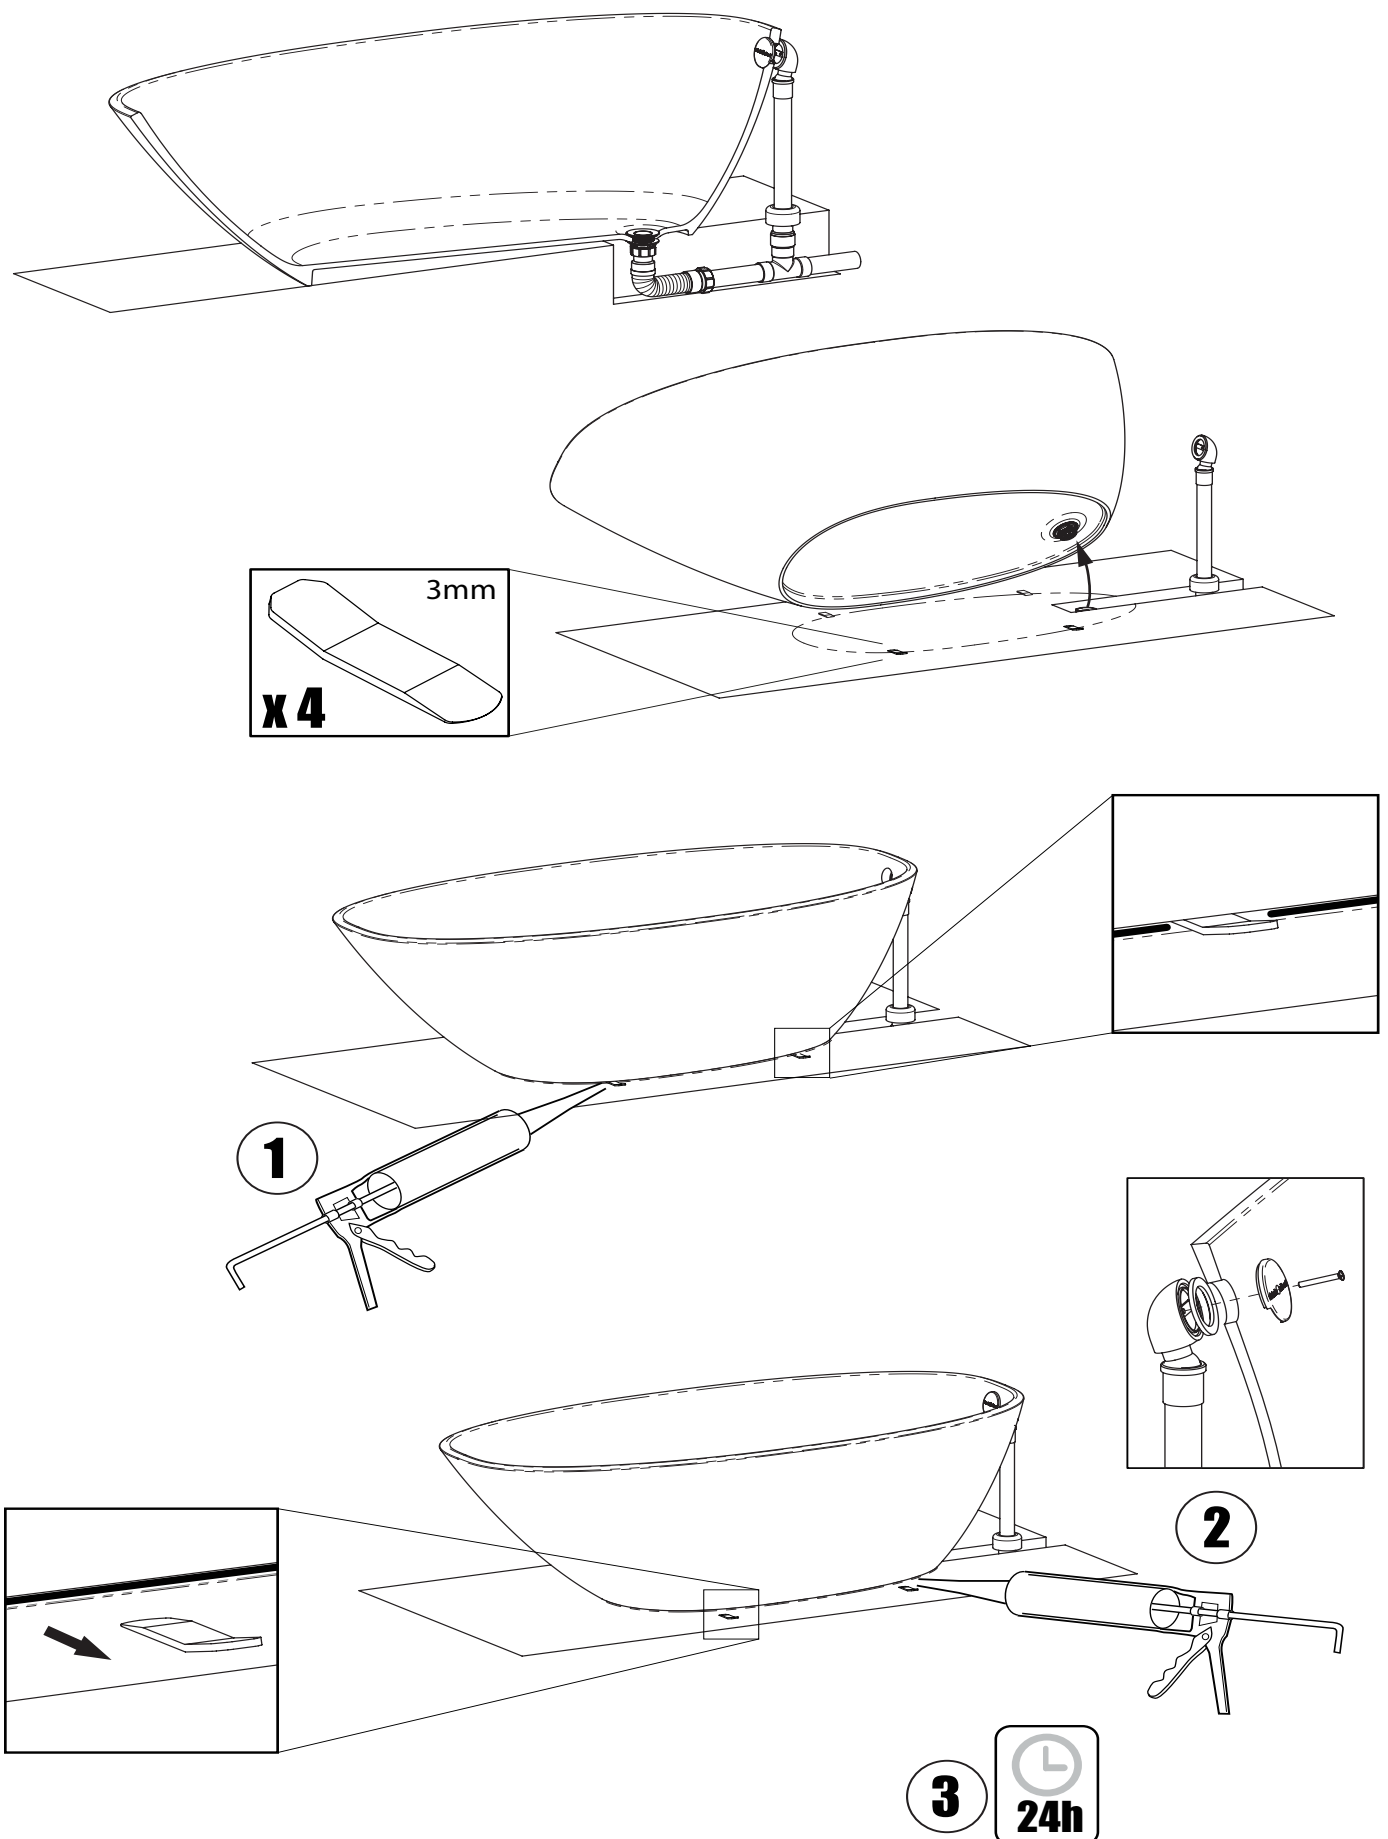

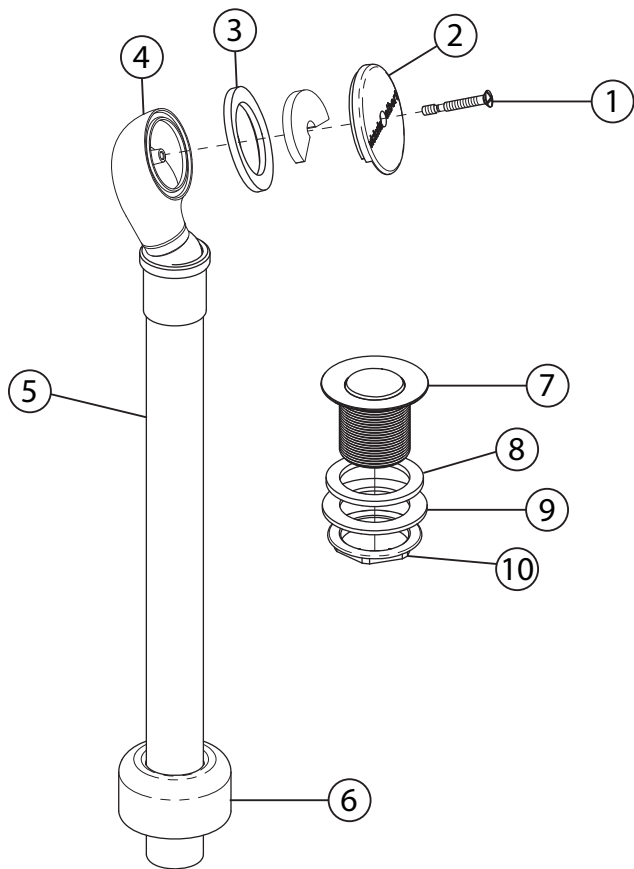


1. Snip Screw
2. Overflow Plate
3. Shaped Washer
4. Overflow Body
5. Overflow Pipe
6. Shroud
7. Waste Body
8. Foam Washer
9. Rubber Washer
10. Back Nut


1

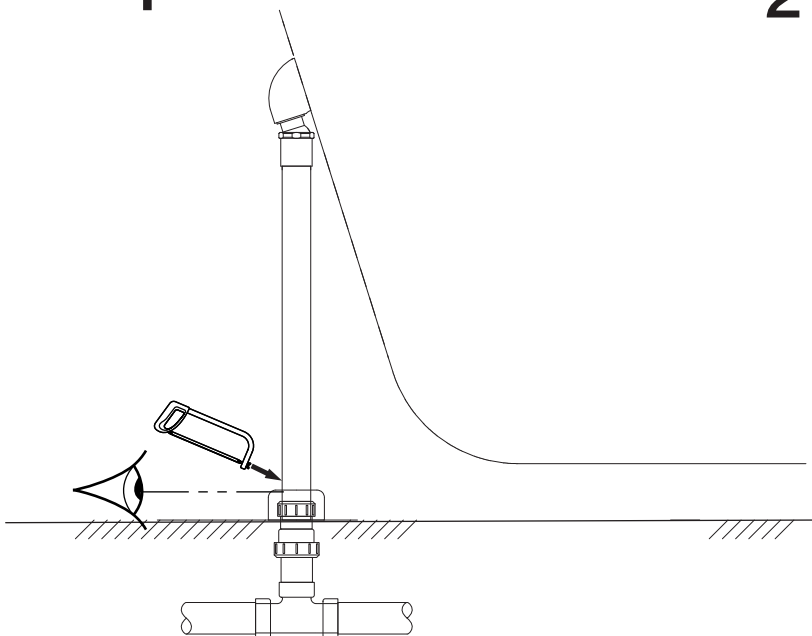


2




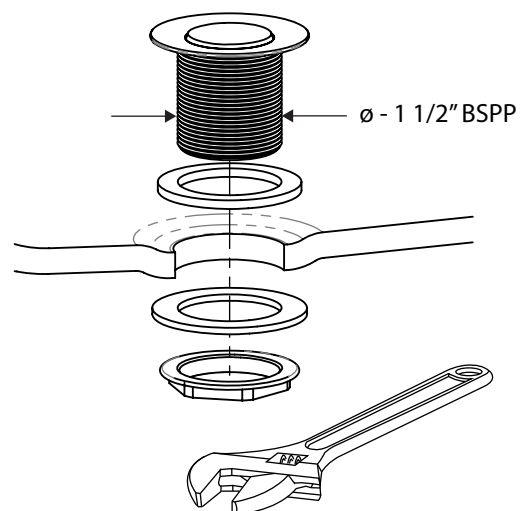



EDGE
IOS
AMALFI
RAVELLO
TOULOUSE

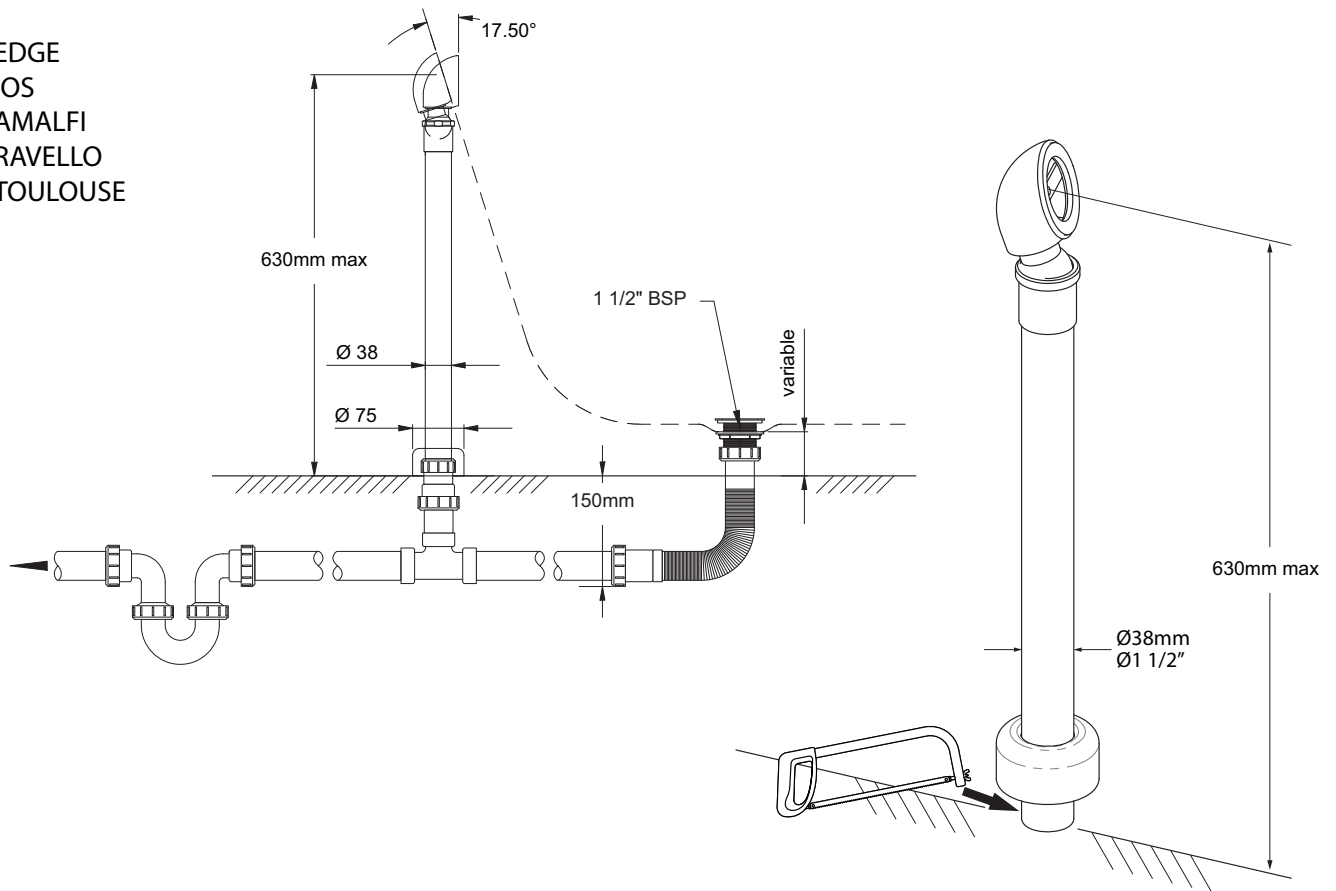

BARCELONA
NAPOLI
CABRITS
MOZZANO

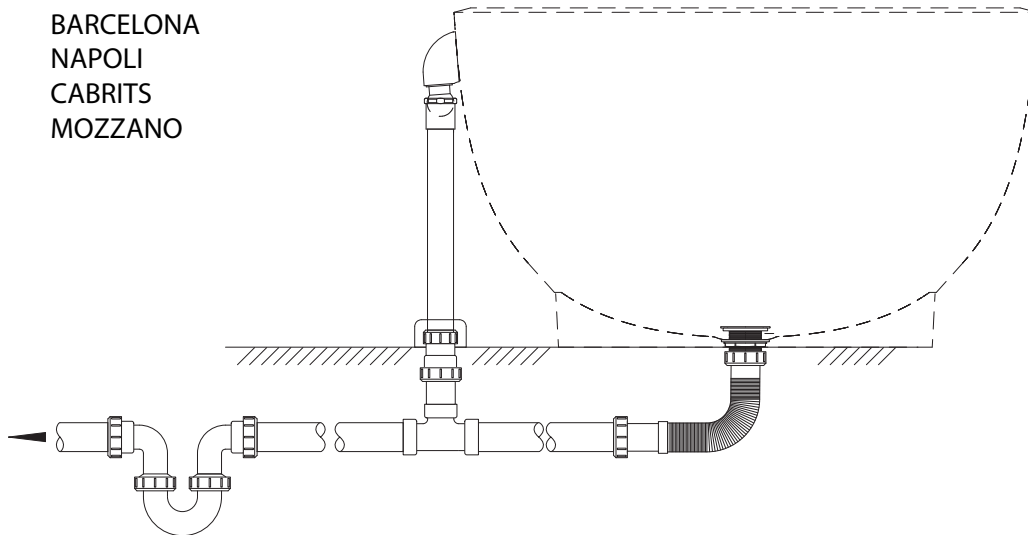

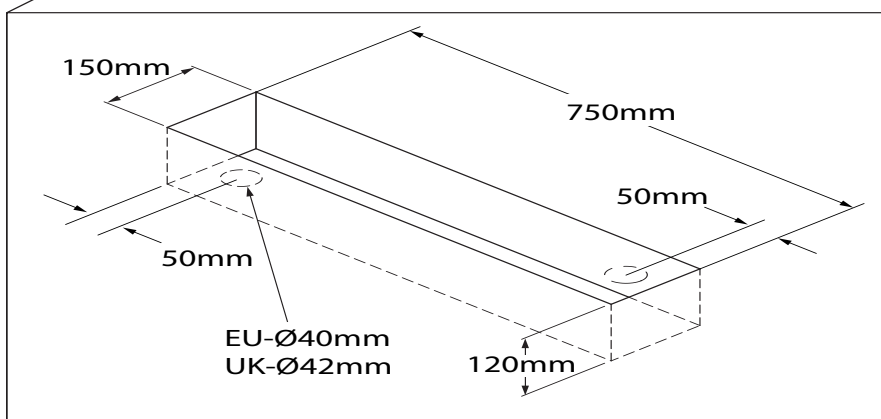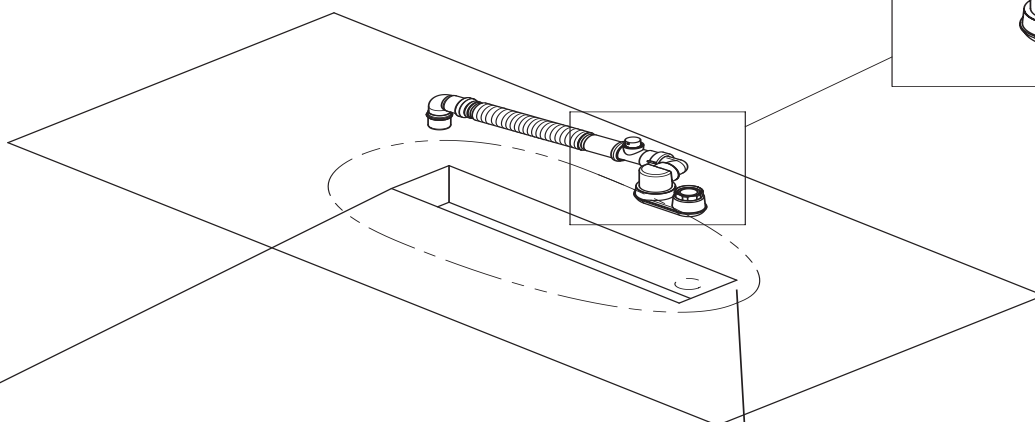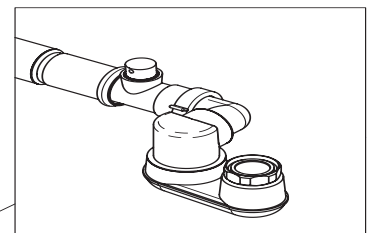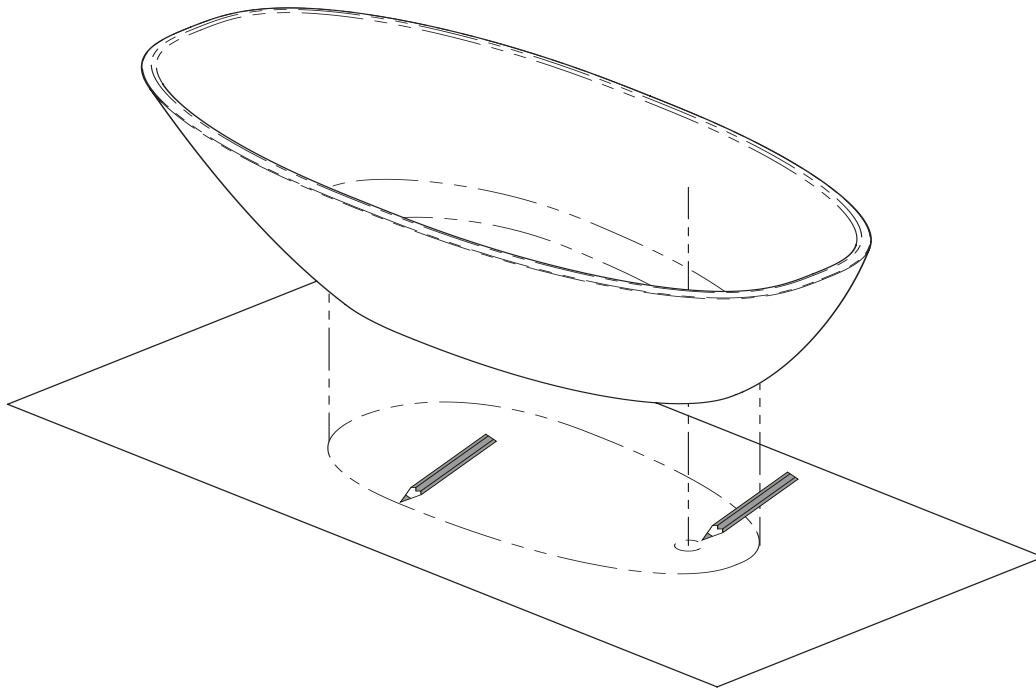

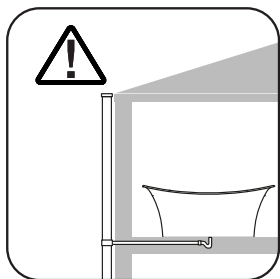

EN: Must use a ventilated waste

ES: El desagüe debe tener tubo de aspiración

DE: Belüftete Hauptentwässerungsleitung notwendig

IT: Deve essere usato uno scarico ventilato

FR: Veiller à utiliser un système d'évacuation ventilé

Item Description

- 1 Spanner
- 2 Plug access tool
- 3 Waste with overflow control
- 4 Sponge Washer Ø70x48x4
- 5 PVC Washer Ø70x48x5
- 6 PVC Washer Ø70x48x3
- 7 1 1/2" Brass Lock Nut
- 8 Flat Washer Ø40
- 9 Siphon
- 10 Air Admittance Valve
- 11 Flexible Pipe
- 12 Elbow Ø40mm
- 13 UK Adaptor Ø40 to Ø42mm
- 14 Ø120 x 1mm Silicone Cover

